



ZEBRA

WT6000/WT6300 RS4000/RS5000/RS6000 Series

Accessories Guide

Kreski

Zapraszamy do kontaktu!
Więcej informacji: www.kreski.pl

Charging Options

Single Cradles



WT6x Single Slot Cradle w/Spare Battery Charger:

CRD-NGWT-1S1BU-01: Single slot USB Cradle, w/spare battery charging, charges one wearable terminal and one spare battery.

Allows USB communication to the device with an additional micro-USB cable.

Requires: Power Supply **PWR-BGA12V50W0WW**, DC Line Cord **CBL-DC-388A1-01** and Country Specific 3 wire AC Line Cord.

Additional accessories for single slot cradle



25-124330-01R

Micro-USB to USB Cable for single slot cradle



PWR-BGA12V50W0WW

Level VI AC/DC Power Supply (Brick, replacement for PWRS-14000-148R)

AC Input: 100-240V, 2.4A

DC Output: 12V, 4.16A, 50W

Requires: DC line cord and Country specific grounded AC line cord.



CBL-DC-388A1-01

DC Line Cord for running the single slot cradles or battery chargers from a single Level VI power supply PWR-BGA12V50W0WW, Level VI replacement for PWRS-14000-148R.



23844-00-00R

US AC line cord, 7.5 feet long, grounded, three wire for power supplies.

Charging LED indicators

Off	Battery not charging
Solid Amber	Healthy battery charging
Solid Green	Healthy battery charging complete
Fast Blink Red	Charging error
Solid Red	Unhealthy battery

Charging Options

Single Cradles



RS6000 Single Slot Cradle w/Spare Battery Charger:

CRD-NGRS-1S1BU-01: Single slot USB Cradle, w/spare battery charging, charges one ring scanner and one spare battery.

Allows USB communication to the device with an additional micro-USB cable.

Requires: Power Supply **PWR-BGA12V50W0WW**, DC Line Cord **CBL-DC-388A1-01** and Country Specific 3 wire AC Line Cord.

Additional accessories for single slot cradle



25-124330-01R

Micro-USB to USB Cable for single slot cradle



PWR-BGA12V50W0WW

Level VI AC/DC Power Supply (Brick, replacement for PWRS-14000-148R)

AC Input: 100-240V, 2.4A

DC Output: 12V, 4.16A, 50W

Requires: DC line cord and Country specific grounded AC line cord.



CBL-DC-388A1-01

DC Line Cord for running the single slot cradles or battery chargers from a single Level VI power supply PWR-BGA12V50W0WW, Level VI replacement for PWRS-14000-148R.



23844-00-00R

US AC line cord, 7.5 feet long, grounded, three wire for power supplies.

Charging LED indicators

Off	Battery not charging
Solid Amber	Healthy battery charging
Solid Green	Healthy battery charging complete
Fast Blink Red	Charging error
Solid Red	Unhealthy battery

Charging Options

Two-Slot Cradle



WT6x/RS6000 Two Slot Cradle:

CRD-NWTRS-2SUCH-01: 2slot USB Cradle, charges one wearable terminal and one ring scanner.

Allows USB communication to each device with an additional micro-USB cable.

Requires: Power Supply **PWR-BGA12V50W0WW**, DC Line Cord **CBL-DC-388A1-01** and Country Specific 3 wire AC Line Cord.

Additional accessories for single slot cradle



25-124330-01R

Micro-USB to USB Cable for single slot cradle



PWR-BGA12V50W0WW

Level VI AC/DC Power Supply (Brick, replacement for PWRS-14000-148R)

AC Input: 100-240V, 2.4A

DC Output: 12V, 4.16A, 50W

Requires: DC line cord and Country specific grounded AC line cord.



CBL-DC-388A1-01

DC Line Cord for running the single slot cradles or battery chargers from a single Level VI power supply PWR-BGA12V50W0WW, Level VI replacement for PWRS-14000-148R.



23844-00-00R

US AC line cord, 7.5 feet long, grounded, three wire for power supplies.

Charging LED indicators

Off	Battery not charging
Solid Amber	Healthy battery charging
Solid Green	Healthy battery charging complete
Fast Blink Red	Charging error
Solid Red	Unhealthy battery

Charging Options

Five-Slot Cradles



Five-Slot Cradle options:

CRD-NGWT-5S5BC-01: WT6x 5Slot Charge Only Cradle w/Spare Battery Charger, charges up to 5 wearable terminals and 5 spare batteries.

CRD-NGRS-5S5BC-01: RS6000 5Slot Charge Only Cradle w/Spare Battery Charger, charges up to 5 ring scanners and 5 spare batteries.

CRD-NGWT-5S5BE-01: WT6x 5Slot Ethernet Cradle w/Spare Battery Charger, charges up to 5 ring scanners and 5 spare batteries.

CRD-NGRS-5S5BE-01: RS6000 5Slot Ethernet Cradle w/Spare Battery Charger, charges up to 5 ring scanners and 5 spare batteries.

All Cradles Require: Power Supply **PWR-BGA12V108W0WW**, DC Cord **CBL-DC-381A1-01** and Country Specific 3 wire AC Line Cord.

Additional accessories



PWR-BGA12V108W0WW

Level VI AC/DC Power Supply (Brick, Replacement for PWRS-14000-241R)

AC Input: 100-240V, 2.8A

DC Output: 12V, 9A, 108W

Requires: DC line cord and Country specific grounded AC line cord.



CBL-DC-381A1-01

DC Line Cord for running multi-slot cradles from a single Level VI power supply PWR-BGA12V108W0WW, Level VI replacement for PWRS-14000-241R



23844-00-00R

US AC line cord, 7.5 feet long, grounded, three wire for power supplies.



BRKT-SCRD-SMRK-01

Rack/Wall Mounting bracket for multi-slot cradles.

Charging LED indicators

Off	Battery not charging
Solid Amber	Healthy battery charging
Solid Green	Healthy battery charging complete
Fast Blink Red	Charging error
Solid Red	Unhealthy battery

Charging Options

Kreski

Ten-Slot Cradles



Ten-Slot Cradle options:

CRD-NWTRS-10SCH-01: WT6x/RS6000 10Slot Charge Only Cradle, charges up to 5 wearable terminals and 5 ring scanners.

CRD-NGWT-10SCH-01: WT6x 10Slot Charge Only Cradle, charges up to 10 wearable terminals.

CRD-NGRS-10SCH-01: RS6000 10Slot Charge Only Cradle, charges up to 10 ring scanners

All Cradles Require: Power Supply **PWR-BGA12V108W0WW**, DC Cord **CBL-DC-381A1-01** and Country Specific 3 wire AC Line Cord.

Additional accessories



PWR-BGA12V108W0WW

Level VI AC/DC Power Supply (Brick, Replacement for PWRS-14000-241R)

AC Input: 100-240V, 2.8A

DC Output: 12V, 9A, 108W

Requires: DC line cord and Country specific grounded AC line cord.



CBL-DC-381A1-01

DC Line Cord for running multi-slot cradles from a single Level VI power supply PWR-BGA12V108W0WW, Level VI replacement for PWRS-14000-241R



23844-00-00R

US AC line cord, 7.5 feet long, grounded, three wire for power supplies.



BRKT-SCRD-SMRK-01

Rack/Wall Mounting bracket for multi-slot cradles.

Charging LED indicators

Off	Battery not charging
Solid Amber	Healthy battery charging
Solid Green	Healthy battery charging complete
Fast Blink Red	Charging error
Solid Red	Unhealthy battery

Multi-Slot Cradle Installations



Battery / battery charging accessories

3350 mAh Battery

BTRY-NWTRS-33MA-02

PowerPrecision+ Lithium Ion battery, 3350 mAh. Advanced battery technology, provides higher level of intelligence (State of Charge and State of Health) for wearable terminal or ring scanner.



5000 mAh Battery

BTRY-NGWT-50MA-01

PowerPrecision+ Lithium Ion battery, 5000 mAh for WT6x wearable terminal. For extended run time at ambient temperature and in freezer environments. **Not for use in RS6000.**



Spare Battery Charging Options:



SAC-NWTRS-4SCH-01: 4-slot battery charger, charges four spare batteries. **Requires:** Power Supply **PWR-BGA12V50W0WW**, DC Line Cord **CBL-DC-388A1-01** and Country Specific 3 wire AC Line Cord.

SAC-NWTRS-20SCH-01:

20-slot battery charger, charges 20 spare batteries. **Requires:** Power Supply **PWR-BGA12V108W0WW**, DC Cord **CBL-DC-381A1-01** and Country Specific 3 wire AC Line Cord.



Accessories for battery chargers:



PWR-BGA12V50W0WW

Level VI AC/DC Power Supply

AC Input: 100-240V, 2.4A

DC Output: 12V, 4.16A, 50W

Requires: DC line cord and Country specific grounded AC line cord.



CBL-DC-388A1-01

DC Line Cord for running the single slot cradles or battery chargers from a single Level VI power supply PWR-BGA12V50W0WW.



PWR-BGA12V108W0WW

Level VI AC/DC Power Supply

AC Input: 100-240V, 2.8A

DC Output: 12V, 9A, 108W

Requires: DC line cord and Country specific grounded AC line cord.



CBL-DC-381A1-01

DC Line Cord for running multi-slot cradles from a single Level VI power supply PWR-BGA12V108W0WW.



23844-00-00R

US AC line cord, 7.5 feet long, grounded, three wire for power supplies.



BRKT-SCRD-SMRK-01

Rack/Wall Mounting bracket for multi-slot cradles and 20slot battery charger.

WT6x Keypad

Kreski

Zapraszamy do kontaktu!
Więcej informacji: www.kreski.pl

Accessory Keypad for WT6x Wearable Terminal

KYPD-WT6XANFASM-01

WT6x Keypad Assembly, Alphanumeric and Function, Includes Mounting Cleat



ACC-WT6XCLTMNT-01

Spare Mounting Cleat for WT6x Keypad Assembly



WT6x with
Attached Keypad

Cables/Adapters

USB/Charge Cable

CBL-NGWT-USBCHG-01

Provides USB communication and charge to the wearable terminal.

Requires: Power supply **PWR-BUA5V16W0WW**, DC Line Cord **CBL-DC-383A1-01** and un-grounded country specific AC line cord.



Audio Cables

CBL-NGWT-AUQDLG-01

Audio adapter cable, compatible with quick-disconnect wired headsets. Compatible while the device is worn on the hip.

Requires: QD headset.



CBL-NGWT-AUQDST-01

Audio adapter cable, compatible with quick-disconnect wired headsets. Compatible while the device is worn on the wrist.

Requires: QD headset.



Other Cables

CBL-NGWT-HDVBAP-01

Vibrating cable, connects directly to the wearable terminal and provides additional haptic feedback to the user.



PWR-BUA5V16W0WW

Level VI AC/DC Power Supply

AC Input: 100-240V, 0.6A

DC Output: 5.4V, 3A, 16W

Requires: DC line cord and Country specific un-grounded AC line cord.



CBL-DC-383A1-01

DC Line Cord for running single slot cradles or charging cables from a single Level VI power supply PWR-BUA5V16W0WW.



50-16000-182R

US AC line cord, un-grounded, two-wire.



RCH51

Rugged wired headset with quick-disconnect



25-129938-02R

Training cable - connects two wired headsets to one mobile computer

Soft-Goods

iKreski

Wearable Terminal



Wrist Mount options:

SG-NGWT-WRMTS-01: WT6x Wrist Mount, includes carrier, comfort pad and small/medium strap.

SG-NGWT-WRMTL-01: WT6x Wrist Mount, includes carrier, comfort pad and medium/large strap.

SG-NGWT-WRMTXL-01: WT6x Wrist Mount, includes carrier, comfort pad and extra large strap.

Additional accessories



SG-NGWT-WSTPST-01

Spare replacement strap for wrist mount (small/medium)



SG-NGWT-WSTPLN-01

Spare replacement strap for wrist mount (medium/large)



SG-NGWT-WSTPLX-01

Spare replacement strap for wrist mount (extra large)



SG-WT4027050-01R

Optional arm sleeves for wrist mount (pack of 5)



SG-NGWT-CMPD-01

Replacement comfort pad for wrist mount.



SG-NGWT-HPMNT-01

Hip-mount for wearable terminal, allows to use the device on the hip.

Soft-Goods: Wrist Mount



- **Velcro removed**
- **One Adjustable strap instead of two**
- **Integrated BOA closure system**
 - Strong
 - Durable
 - Easy to use
- **Specific Materials chosen for hygienic reasons**
 - Can be cleaned down on site
 - Non absorbent



BOA closure system

Specific Materials chosen for grip and wipe down qualities

Soft-Goods: Comfort Pad



Zapraszamy do kontaktu!
Więcej informacji: www.kreski.pl


Orientation Feature

Allows user to know which way to replace the comfort pad

Large Over lap

- Retains comfort pad to carrier
- Easy to peel off the comfort pad when wanting to remove

Airflow Pattern for breathability

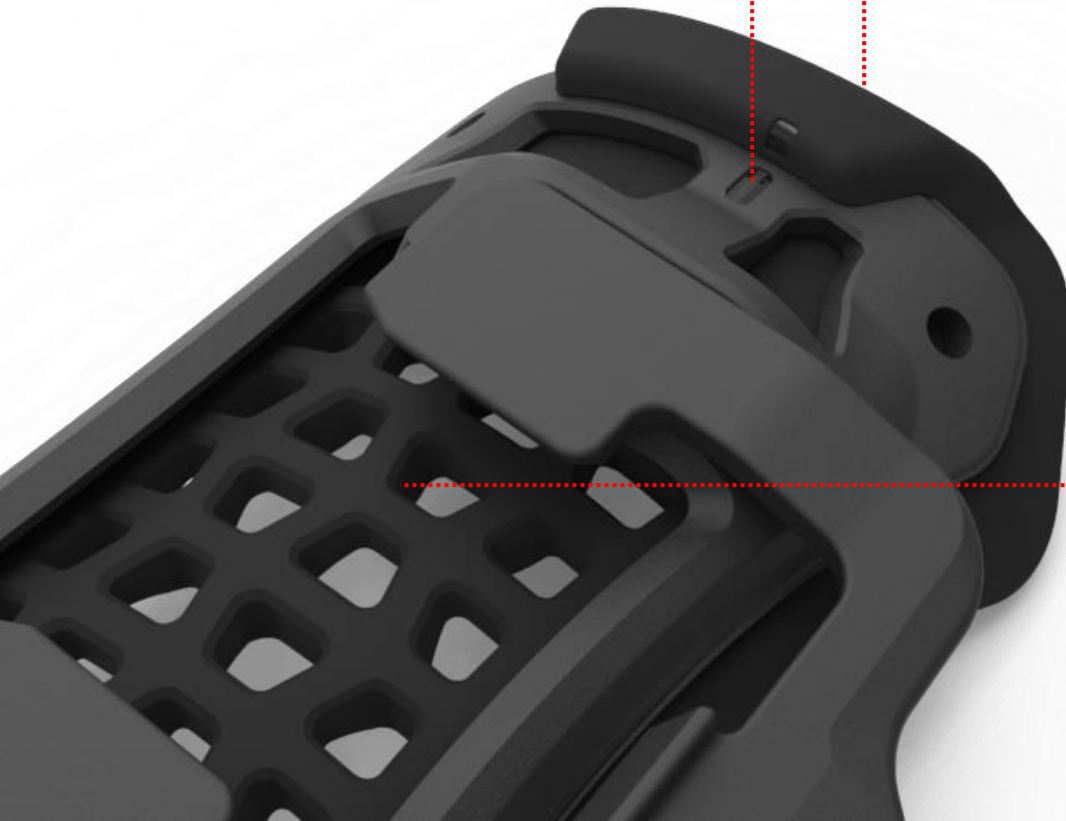

Soft-Goods: Wrist Strap

Kreski

Zapraszamy do kontaktu!
Więcej informacji: www.kreski.pl



Improved ease of
removal of strap from
carrier

Retaining Rib holding
elastic cord in place
when not under load

Three size straps to cover the many
various sizes of users

Small Strap



White Dial and
accent colour call
out for Small Strap
Identification

Large Strap



Black Dial and
accent colour call out
for Large Strap
Identification

Ex-Large Strap



Blue Dial and
accent colour call
out for Ex-Large
Strap Identification

Soft-Goods

RS4000 / RS5000 Ring Scanner

Kreski

Zapraszamy do kontaktu!
Więcej informacji: www.kreski.pl

Spare Accessories for RS4000 and RS5000 Ring Scanners



SG-NGRS-SFSVS-01R

RS4000 / RS5000 Standard Spare
Finger Strap (Single Pack, 6" length)



SG-RS419-FGSTP-02R

RS4000 / RS5000 Extended Spare
Finger Strap (Single Pack, 7.8" length)



SG-NGRS-SFRVPD-05

RS5000 Replacement Velcro Pads
for Attaching RS5000 Power Buffer
to WT41N0 Wrist Mount
(Pack of 5 units)



SG-NGRS-TRGASR-01R

RS4000 / RS5000 Replacement
Trigger Assembly

Soft-Goods

RS5100 Ring Scanner

Kreski

Zapraszamy do kontaktu!
Więcej informacji: www.kreski.pl

Trigger Accessories for RS5100 Ring Scanner



SG-RS51-TRGSS-01

RS5100 replacement trigger assembly, single sided trigger. Includes comfort pad and strap.



SG-RS51-TRGDS-01

RS5100 replacement trigger assembly, double sided trigger.



SG-RS51-CMPD-05

RS5100 replacement comfort pads, to be used with single sided trigger (5-pack).

SG-RS51-TRGDU-01

Double Sided trigger with USB-C

SG-RS51-TRGDV-01

Double Sided trigger with vibration



SG-RS51-BHMT-01

RS5100 Back of Hand mount.

SG-RS51-BHSTP-01

Replacement strap for RS5100 back of hand mount

SG-RS51-STRPNY-10

RS5100 spare nylon finger straps single sided trigger (10-pack).



SG-RS51-LNYD-01

RS5100 Spare Lanyard Trigger Assembly.


Soft-Goods

RS6000 Ring Scanner

Kreski

Zapraszamy do kontaktu!
Więcej informacji: www.kreski.pl

Spare Accessories for RS6000 Ring Scanner

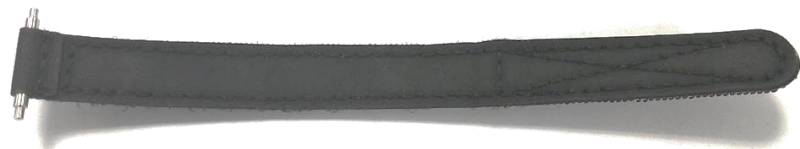

SG-NGRS-STRPKV-10

RS6000 Spare velcro finger straps for trigger configuration (pack of 10 units). Order buckles SG-NGRS-STBKLV-10 separately.



SG-NGRS-TRGA-01

RS6000 replacement trigger swivel assembly for use with Velcro straps. Order finger straps SG-NGRS-STRPKV-10 and buckles SG-NGRS-STBKLV-10 separately



SG-NGRS-STRPNY-10

RS6000 spare nylon finger strap for triggered configurations with cam buckle (10 pack).



SG-NGRS-TRGA-02

RS6000 replacement trigger swivel assembly for use with nylon straps. Order finger straps SG-NGRS-STRPNY-10 separately



SG-NGRS-STBKLV-10

RS6000 Spare buckles for velcro finger strap (pack of 10 units) Order velcro finger straps separately.



SG-NGRS-CMPD-01

RS6000 Replacement comfort pads. Pack includes front and back comfort pads.