



Product 711040



711040 Passive holder with tilt swivel For all versions with pistol grip. Adjustable swiveling top for extra secure hold.

Custom designed holder with a perfect fit for all Zebra MC3300 versions with pistol grip. Extra secure hold with a swiveling top. Robust design, very strong construction for every day professional use in rough environments. Keep your device in a passive holder and you will always have it within easy reach! Neat, discreet and convenient.

The holder is equipped with a tilt swivel so you can easily adjust the angle of the device. Tilts 17° and swivels 360°. Mounting plate 42x50 mm with AMPS-holes. Made of high grade black ABS/Acetal plastic. Made in Sweden. Attach onto a Pedestal Mount or High Strength Mounting Platform.

EAN: 7320287110401

Item no 711040 fits:

Zebra MC3300 (For all countries)

Kreski

Zapraszamy do kontaktu!
Więcej informacji: www.kreski.pl

INSTALLATION INSTRUCTIONS

1.



2.



3.



4.



Please read all of the instructions and look at the pictures before attaching the holder.

1. To adjust the length of the top arm: Loosen both screws in the holder with the enclosed tool. Pull the arm upward to maximum length. Place the device in the holder. Turn the swiveling top part over the device and press it downward. Carefully turn the swiveling top part away from the device and remove the device without changing the position of the arm. Tighten both screws in the holder to lock the position of the top arm.

2. To attach the holder: Loosen the screw in the center of the holder so you can remove the tilt swivel attaching plate on the back. Place the attaching plate onto the desired position. Screw the attaching plate into place with the enclosed screws. Place the holder over the attaching plate so the screw fits in the hole in the tilt swivel. Tighten the screw so the holder is firmly in place, but still can be adjusted.

3. To place the device in the holder: Hold the device over the holder and slide it straight downward into the holder. Turn the swiveling top over the device.

To remove the device from the holder: Turn the swiveling top sideways so the device is set free. Lift the device straight upward, out from the holder.

4. The holder is in place.

Kreski

Zapraszamy do kontaktu!
Więcej informacji: www.kreski.pl